


Leyland 344 and 384 Tractor - Electrical Wiring Diagram

WIRING DIAGRAM

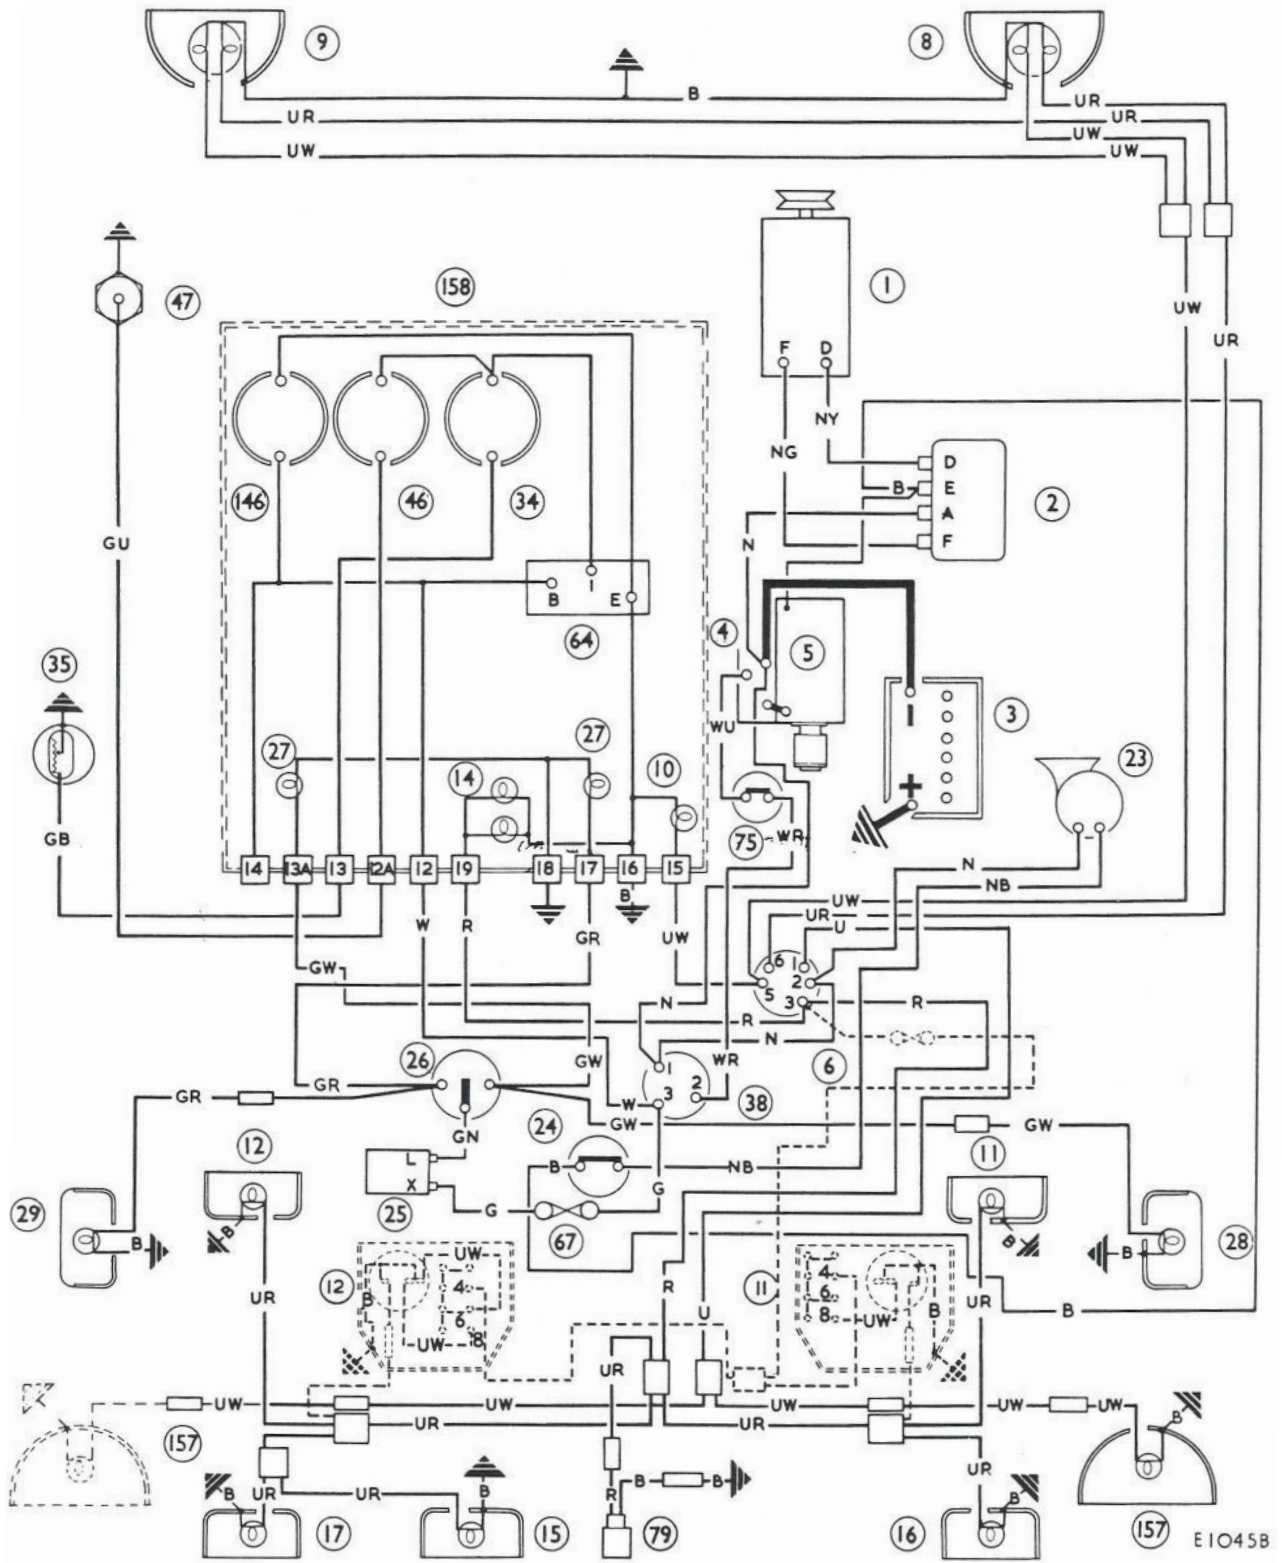

E1045B

KEY TO WIRING DIAGRAM

<i>No.</i>	<i>Description</i>	<i>No.</i>	<i>Description</i>
1.	Generator	25.	Flasher unit
2.	Control box	26.	Direction indicator switch
3.	Battery	27.	Direction indicator warning lamp
4.	Starter solenoid	28.	Right-hand flasher lamp
5.	Starter motor	29.	Left-hand flasher lamp
6.	Lighting switch	34.	Fuel gauge
8.	Right-hand headlamp	35.	Fuel gauge tank unit
9.	Left-hand headlamp	38.	Starter switch
10.	Main-beam warning lamp	46.	Water temperature gauge
11.	Right-hand side lamp or work lamp	47.	Water temperature transmitter
12.	Left-hand side lamp or work lamp	64.	Bi-metal instrument voltage stabilizer
14.	Panel lamps	67.	Line fuse (10 amps)
15.	Number-plate lamp	75.	Safety start switch
16.	Right-hand tail lamp	79.	Trailer socket
17.	Left-hand tail lamp	146.	Battery condition indicator
23.	Horn	157.	Plough lamp
24.	Horn-push	158.	Printed circuit instrument panel

CABLE COLOUR CODE

B.	Black	N.	Brown	U.	Blue
G.	Green	P.	Purple	W.	White
LG.	Light Green	R.	Red	Y.	Yellow

When a cable has two colour code letters the first denotes the main colour and the second denotes the tracer colour