


Nuffield 3/45 and 4/65 Tractor - Electrical Wiring Diagram (15ACR Alternator)

WIRING DIAGRAM (15ACR ALTERNATOR)

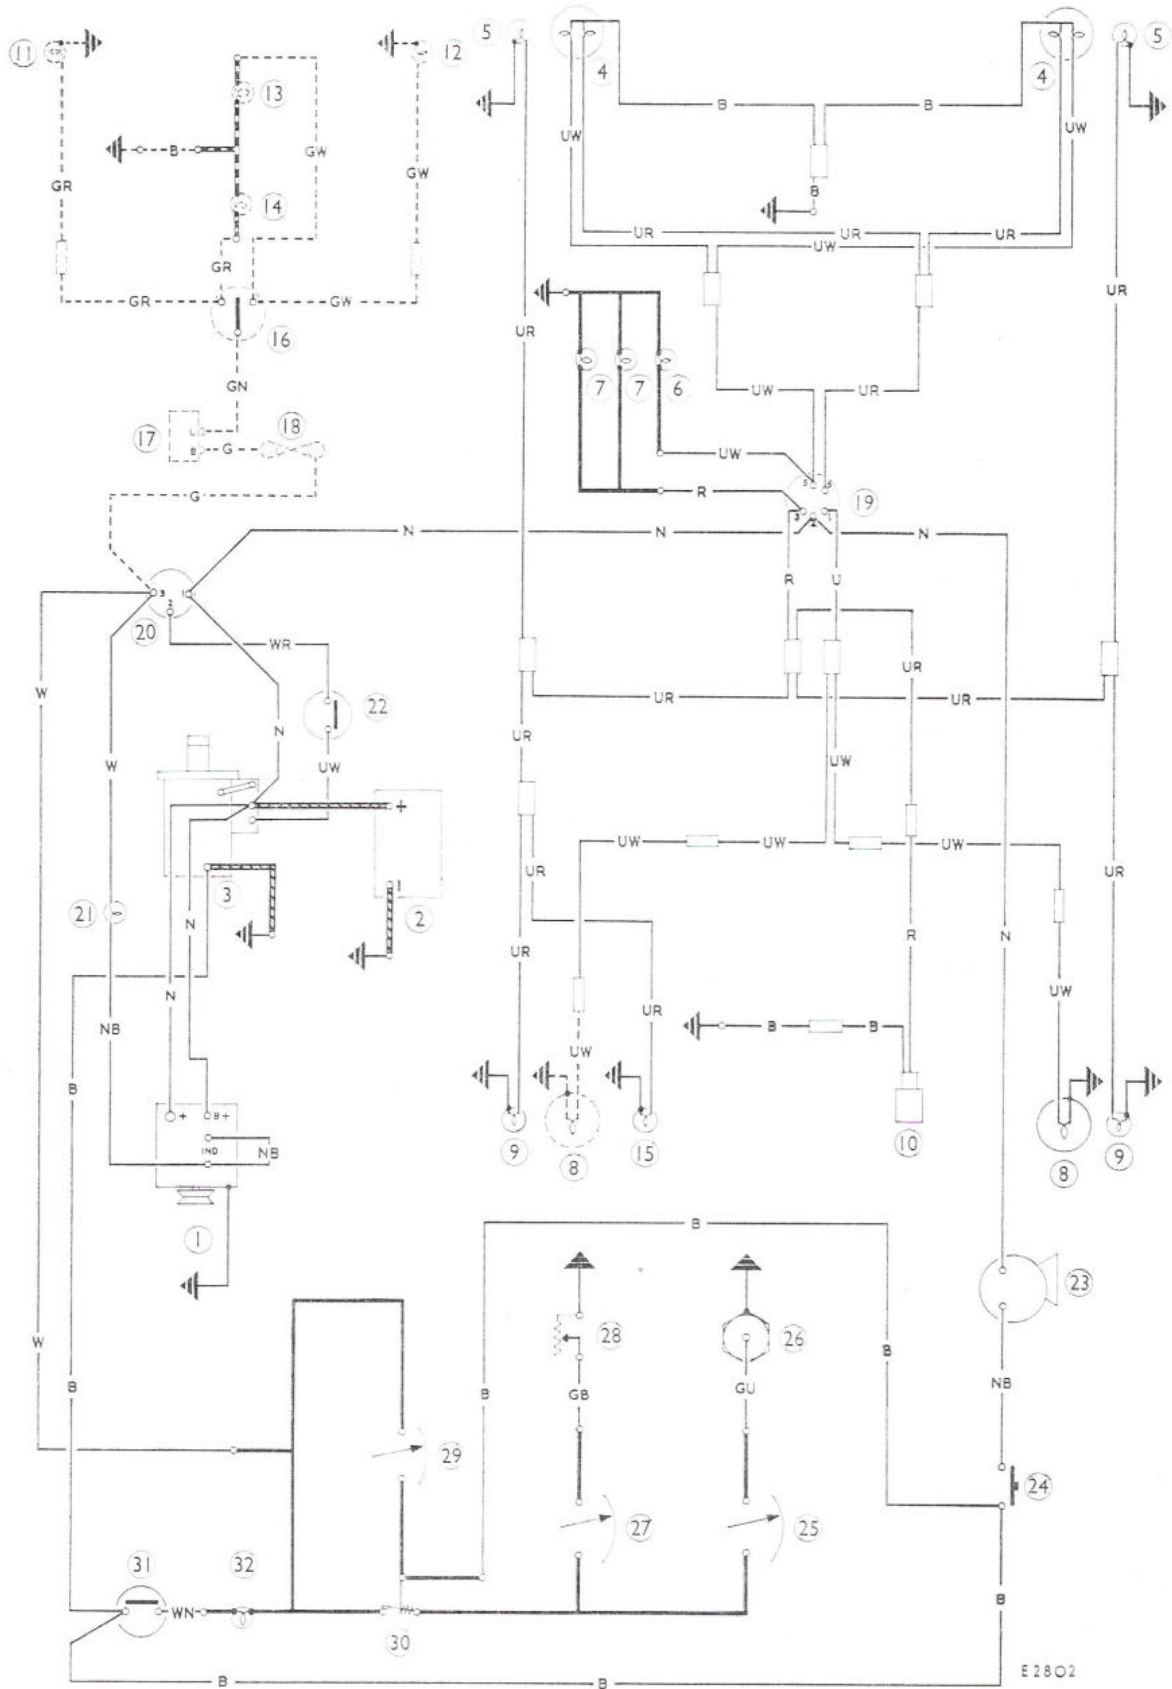

KEY TO WIRING DIAGRAM - (15ACR ALTERNATOR)

<i>No.</i>	<i>Description</i>	<i>No.</i>	<i>Description</i>
1.	Alternator	17.	Flasher unit
2.	Battery	18.	Line fuse
3.	Starter motor	19.	Lighting switch
4.	Headlamps	20.	Master-starter switch
5.	Side lamps	21.	No charge warning light
6.	Main beam warning light	22.	Safety start switch
7.	Panel lamp	23.	Horn
8.	Plough lamp	24.	Horn push
9.	Tail lamp	25.	Temperature gauge
10.	Trailer socket	26.	Temperature transmitter
11.	Flasher lamp - L.H.	27.	Fuel gauge
12.	Flasher lamp - R.H.	28.	Fuel tank unit
13.	Direction indicator warning lamp - R.H.	29.	Battery condition indicator
14.	Direction indicator warning lamp - L.H.	30.	Voltage stabilizer
15.	Number-plate lamp	31.	Air filter switch
16.	Direction indicator switch	32.	Air filter warning Lamp

CABLE COLOUR CODE

N.	Brown	W.	White	LG.	Light Green
R.	Red	U.	Blue	Y.	Yellow
G.	Green	P.	Purple	B.	Black

When a cable has two colour code letters the first denotes the main colour and the second denotes the tracer colour